


HAMBURG COLLECTION

TISSUE HOLDER

440151L

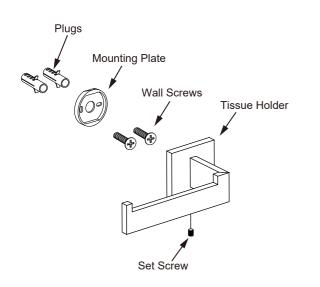


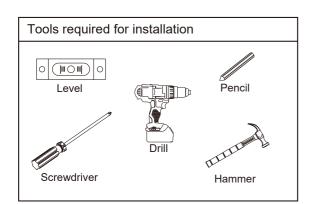

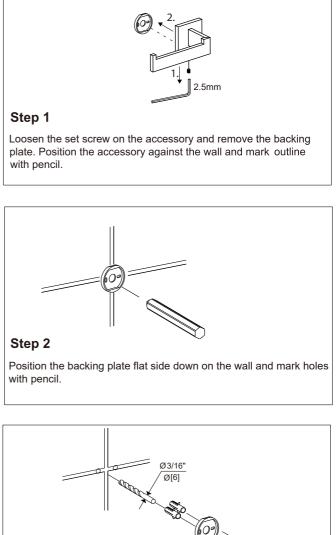

Step 3

Predrill 3/16" holes on the wall to fit wall plugs. Insert wall plugs into the wall. Position backing plate flat side down over the plugs and install screws.

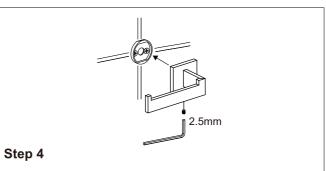

Slide the accessory onto the backing plate and tighten the set screw using Allen key provided.